

REAR BODY BRACE

Golf 7 & 7.5

VWR85G700

FITTING INSTRUCTIONS



WHAT'S IN THE KIT?

- ▷ 1 x Top Brace Bar
- ▷ 2 x Lower Brace Bar
- ▷ 2 x Luggage Brace Mount
- ▷ 2 x Upper Centre Mount
- ▷ 2 x Upper Mount (Bottom half)
- ▷ 2 x Upper Mount (Top half)
- ▷ 6 x M4 (16mm) Cap Head Screw
- ▷ 4 x M4 (14mm) Cap Head Screw
- ▷ 4 x M4 (18mm) Countersunk Screw
- ▷ 2 x M8 (26mm) Countersunk Screw
- ▷ 4 x M8 (28mm) Countersunk Screw
- ▷ 1 x M6 Tensioner

REQUIRED TOOLS AND PARTS

- ▷ T25 2.5 mm Allen
- ▷ 3 mm Allen
- ▷ 5 mm Allen
- ▷ 10 mm Spanner
- ▷ M8 Spline
- ▷ Screwdriver/Trim Removal Tool

FITTING NOTES

- ▷ Off the car, preassemble top bar with 2 x Upper Centre Mount and 2 x Upper Mount (Lower) before offering up to vehicle.
- ▷ Tensioner has a left-hand and right-hand thread, check orientation before assembling in Upper Centre Mount.
- ▷ Before fully tightening brace in place, ensure rear seats click securely into place correctly.
- ▷ Use centre tensioner to pretension the two-lower brace bars.




FITTING INSTRUCTIONS
VWR85G700



RACINGLINE

Step 1:

Luggage Brace Mount fitment: using a screwdriver/removal tool, open the cover on the OEM luggage net mount (*fig 1a*). Once open, remove using an M8 spline. Replace with the Luggage Brace Mount (*fig 1b*) using 2 x M8 countersunk screw. (Ensure orientation is correct, countersunk hole should be facing the rear of the vehicle)

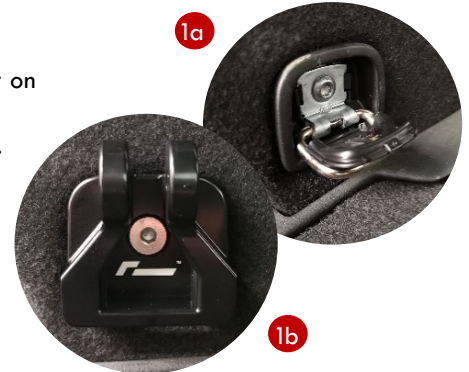

Step 2:

Installation of Top Brace Bar: off the car, preassemble 2 x Upper Mount (Centre) and 2 x Upper Mount (bottom half) onto the Upper Carbon Brace Bar (*fig 2a*). Offer this up to the vehicle (*fig 2b*) then loosely bolt the Upper Mount (top half) onto Upper Mount (bottom half) using 6 x M4 (16mm) cap head screw (*fig 2c*).

Step 3:

Installation of the two Lower Brace Bars – Loosely bolt both Lower Brace Bars into the Luggage Brace Mount (*fig 3a*) using 2 x M8 (28mm) countersunk screws. Next, bolt one Lower Brace Bar up into the Upper Centre Mount. Using the tensioner, line up the remaining Lower Brace Bar and bolt into place using 2 x M8 (28mm) countersunk screw (*fig 3b*).



Step 4:

Final fitment – now all components are loosely installed, the final step is to tighten everything into place. Start with each Upper Mount (ensuring rear seats click into place fully), then turn centre tensioner until both lower braces are held firmly. Now tighten all the remaining screws until all components are held solidly in place.



REMINDER: This rear body brace is NOT to be used as a seat-belt harness mount.